

AMAZONITE CABOCHON GOLD-PLATED RING WITH GOLD STAR

By : Tiffanie Perles & Co



Easy



5 minutes

How to make a ring with a gemstone cabochon?

Nothing could be easier with our ready-to-set rings! Choose your ring size, your 6 mm gemstone cabochon and let's go ! To choose the ring size that best suits your finger, you will need a ring that you already own and that suits you well, a ruler and go to this page which contains a table of correspondence between ring diameters and ring size. Once you have chosen your ring and your cabochon, you only have to choose the shape to stick on a cabochon and possibly a charm to add an extra detail to your ring. Afterwards, to apply the glue with precision, use a toothpick. This ring is a great DIY minute gift idea! Not only do you offer a creation with quality materials such as gold plated and gold filled, but you can also personalize the ring to suit the taste of the person you are giving it to. And if you want to discover more ideas for gold filled and gold plated DIY rings here is the link. Jewelry has also been worn in accumulation in recent years. Go to our gold-plated rings category to choose other rings to match this one if you wish.

Which material to use for Amazonite cabochon gold-plated ring with gold star?

SUPPLIES



Jumpings open 4x0.7 mm 3 micron gold plated x4
Ref. : ACC-294
Quantity : 1



6mm Gemstone round Puck - Amazonite x1
Ref. : GEM-232
Quantity : 1



Thin hammered ring for 6mm cabochon - Size 52 - 3 micron Gold plated x1
Ref. : PLO-046
Quantity : 1



11x4mm Leaf Charm - 3 micron gold plated x1
Ref. : PLO-063
Quantity : 1



4.3mm Star-shaped element to be glued - exclusivity Perles & Co - Gold Tone x1
Ref. : TAL-772
Quantity : 1

SUPPLIES



Kit of 3 pliers in Perles & Co pocket Blue x1
Ref. : OUT-336
Quantity : 1



Jewel Glue Hasulith 30ml
Ref. : OUTIL-007
Quantity : 1

steps

★ Step 1/4

Put glue on your toothpick and apply a generous amount of glue to the centre of the cabochon. Place the small star on it and press the star with the other end of the toothpick without glue. Be careful not to touch the star at the next step because the glue takes 1 hour to harden and 24 hours to dry completely.



★ Step 2/4

Apply glue to the entire lower part of the crimp. Place your cabochon on it and press it without touching the star to position it well and spread the glue underneath.




★ Step 3/4

Gently tighten the legs of the crimp little by little.



★ Step 4/4

Open a ring by rotating both ends with 2 pliers. Slide the charm into the ring, then close the ring on the ring.

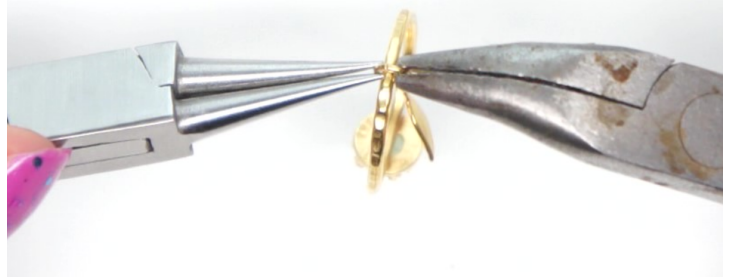

Result