

By : Perles & Co




Easy




15 minutes

SUPPLIES

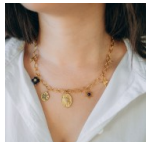

Mes bijoux DIY - Jewelry Kit Necklace charms Astres in Stainless Steel Gilded
Ref. : KIT-483
Quantity : 1

SUPPLIES

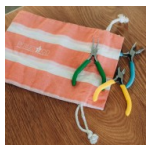

Jewelry pliers kit with free Beads & Co Pochon
Ref. : KIT-482
Quantity : 1

steps

★ Step 1/4

Detach the clasp from the necklace and lay the chain flat, checking that the links have not twisted. Fold the chain in 2 to locate the center of the necklace.



★ Step 2/4

Using two pliers, open a ring and slide it, without closing it, into the oval sun pendant. Place the ring in the central link and close the ring.



★ Step 3/4

Position the other charms in the same way on either side of the oval sun pendant, keeping a regular interval of 2 wide links between each charm (the next charm is positioned on the 3rd wide link).

Here's the suggested sequence, but feel free to position the charms as you wish.



★ Step 4/4

To make the blue clover charm, take a ball-head nail and slide the bead onto it. Using flat-nose pliers, bend the nail at right angles over the clover. Using wire cutters, cut the nail to leave 1 cm of wire. Then form a loop using round-tipped pliers.

You may also like to refer to our data sheet: [Forming a loop on a nail or jewelry wire](#).



Result

